


3

PARTITION PANELS

WHEN ADDING PARTITION PANELS PLEASE BARE IN MIND THAT THE ONLY THING THAT SEPERATES THEN FROM REGULAR PANELS IS THE BRACKET SYSTEM (SECURING PIN SLOTS) ALONG EITHER SIDE OF THE PANEL, PETRUDING FROM THE FRAME. THE PARTITION PANEL HAS A SHORTER BRACKET THAN REGULAR KENNELS.

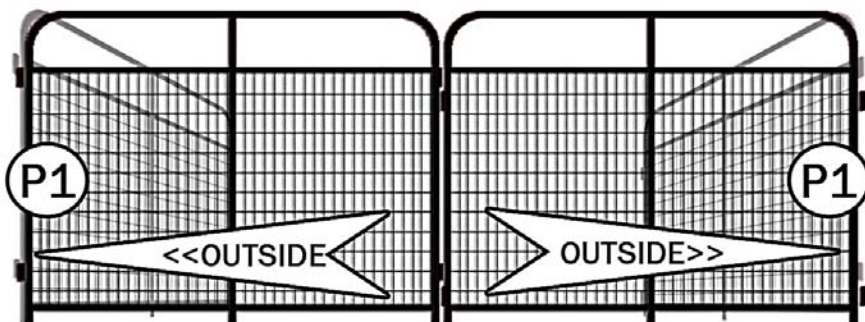


WHEN BUILDING A KENNEL FOR MULTIPLE DOGS PLEASE NOTE THE P1/P2/P3 LABELS ON THE PARTITION PANELS. THESE LABELS INDICATE WHICH END OF THE PARTITION PANEL NEEDS TO CONNECT WITH THE OUTSIDE PANELS OF THE KENNEL.


4

DIGGING PREVENTION

BEGIN BY LAYING DIGGING PREVENTION BARS ON GROUND WHERE YOU WISH TO BUILD YOUR KENNEL. PLACE KENNEL PANEL ON TOP OF DIGGING BAR AND SLIDE PEG INTO BOTTOM OF PANEL TUBING.

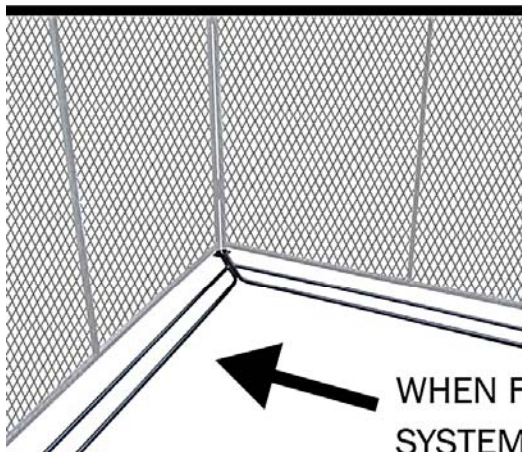

WHEN FINISHED DIGGING PREVENTION SYSTEM SHOULD LOOK LIKE THIS

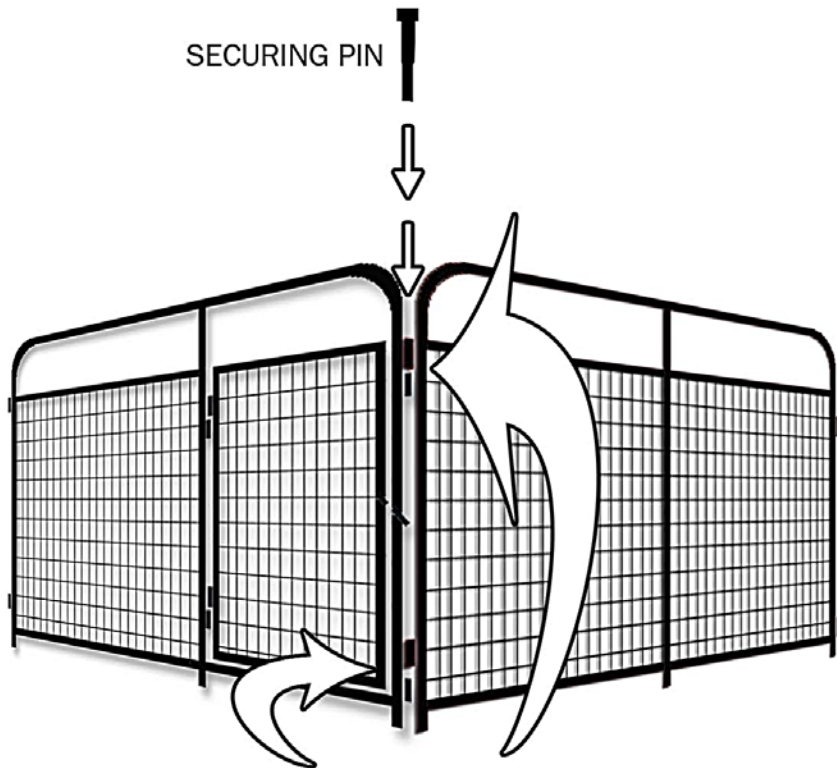

NOTE: EACH CORNER OF YOUR KENNEL SHOULD BE SECURELY FASTENED WITH TWO SECURING PINS. ONE FOR THE TOP SLOT, ONE FOR THE BOTTOM SLOT.

1

GETTING STARTED


BEGIN BY SETTING TWO KENNEL PANELS UPRIGHT WITH THE WELDED SIDE FACING THE INTERIOR OF THE KENNEL, AND THE PANEL TUBING SIDE FACING THE EXTERIOR OF THE KENNEL. ARRANGE THE PANELS INTO A SNUG "L" SHAPE AND PLACE YOUR FIRST SECURING PIN INTO THE TOP CORNER PIN SLOT, FOLLOWED BY THE LOWER PIN. CONTINUE THIS PROCESS UNTIL EACH KENNEL PANEL HAS BEEN PLACED SECURELY.

NOTE: IF KENNEL PANELS ARE NOT SET UP WITH THE TUBING FACING THE OUTSIDE, AND THE WELDED MESH FACING THE INSIDE, THE KENNEL PANELS WILL NOT PROPERLY LINE UP.

IF ADDING DIGGING PREVENTION SYSTEM, LAY ANTI-DIGGING BARS ON GROUND BEFORE BEGINNING KENNEL ASSEMBLY, BUILD KENNEL ON TOP OF DIGGING PREVENTION SYSTEM

2

ADDING CANVAS TOP

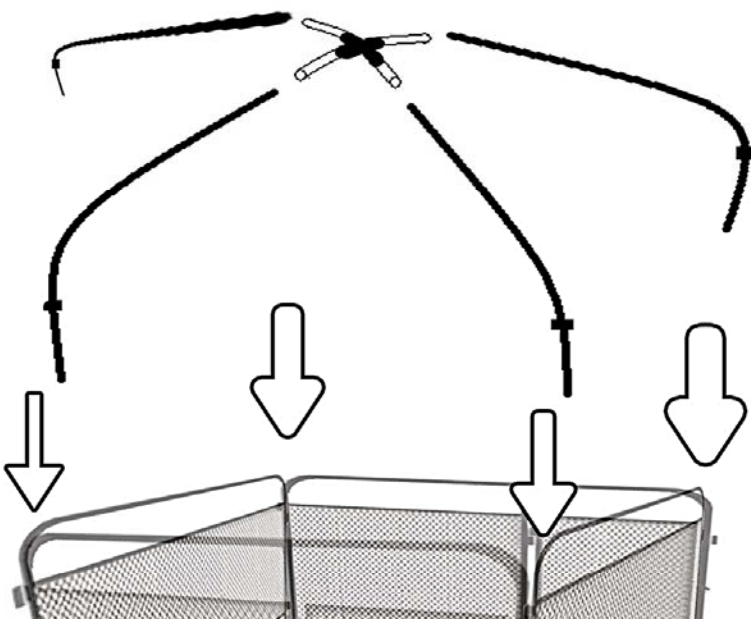

IF YOU PURCHASE A CANVAS TOP WITH ROOF BARS: ROOF BARS REPLACE THE TOP SECURING PINS

TO ADD A CANVAS TOP REMOVE THE TOP CORNER PINS FROM EACH CORNER AND REPLACE THEM WITH THE ROOF BARS. SLIDE ROOF BARS IN THROUGH BOTH OF THE TOP PIN SLOTS FOR EACH CORNER.

NEXT, SECURELY CONNECT EACH ROOF BAR TO THE PEAK CROSS CONNECTOR UNTIL ROOF BARS FORM SOLID PEAK. SIMPLY SLIDE THE CANVAS TOP OVER THE ROOF BARS AND SECURE IT TO THE KENNEL WITH ZIP TIES USING THE METAL D-RINGS ON THE CANVAS TOP.

COTTER PINS CAN BE PLACED IN CROSS CONNECTOR IF DESIRED

