


## STEP 4

ONE AT A TIME, ADD THE FOUR BARS THAT WILL BE USED TO BRING YOUR CANVAS TOP TO A PEAK.  
**AS ILLUSTRATED BELOW:**

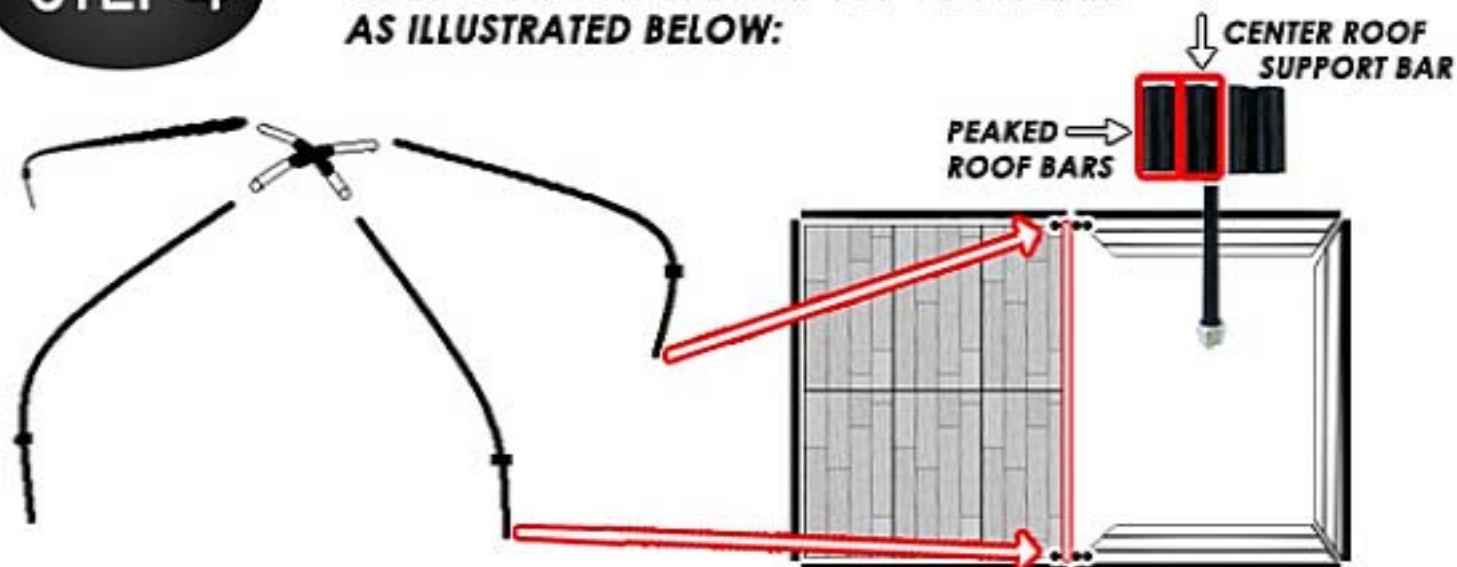

PLACE TWO PEAKED ROOF BARS INTO THE FAR LEFT SLOT ON EACH FOUR-HOLE BRACKET - **AS ILLUSTRATED ABOVE** - INSERT CENTER ROOF SUPPORT BAR INTO THE NEXT SLOT ON THE FOUR-HOLE BRACKET, ALLOWING THE CENTER SUPPORT BAR TO CROSS THROUGH THE MID-SECTION OF THE KENNEL

## STEP 5

**INSERT REMAINING ROOF BARS INTO THE TOP "SLOTS" ON OPPOSITE CORNER**

BRING ALL FOUR PEAKED ROOF BARS TO A POINT AND CONNECT THEM TO THE CROSS-CONNECTOR, INSERT COTTER PIN TO HOLD PEAK IN PLACE.

**AS ILLUSTRATED BELOW:**

 **COTTER PINS PLACED INTO CROSS-CONNECTOR**



PULL CANVAS TOP TIGHTLY AROUND CENTER ROOF SUPPORT BAR AND OUTSIDE PANEL WALLS.

USING ZIP-TIES, ATTACH METAL D-RINGS AT BOTTOM OF CANVAS TOP TO WIRING ON KENNEL PANEL ITSELF.









FOR ADDITIONAL HELP WITH ASSEMBLY, VISIT US ONLINE AT

# K9 KENNEL STORE


## GENERAL ASSEMBLY INSTRUCTIONS

### COMMON PARTS & TERMINOLOGY GUIDE:

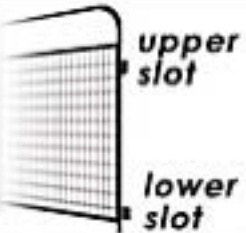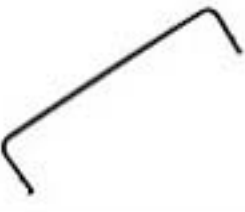	← SECURING PINS	→	
	← PEAKED ROOF BARS	→	
	← COTTER PINS	→	
	← 4-HOLE BRACKETS	→	
	← UPPER & LOWER PIN SLOTS	→	
	← CENTER ROOF SUPPORT BAR	→	

### STEP 1 (OPTIONAL)

FIRST, CONNECT YOUR RAISED/TILE FLOORING SECTIONS & LAY YOUR DIGGING PREVENTION BARS ON THE GROUND. **AS ILLUSTRATED BELOW:**

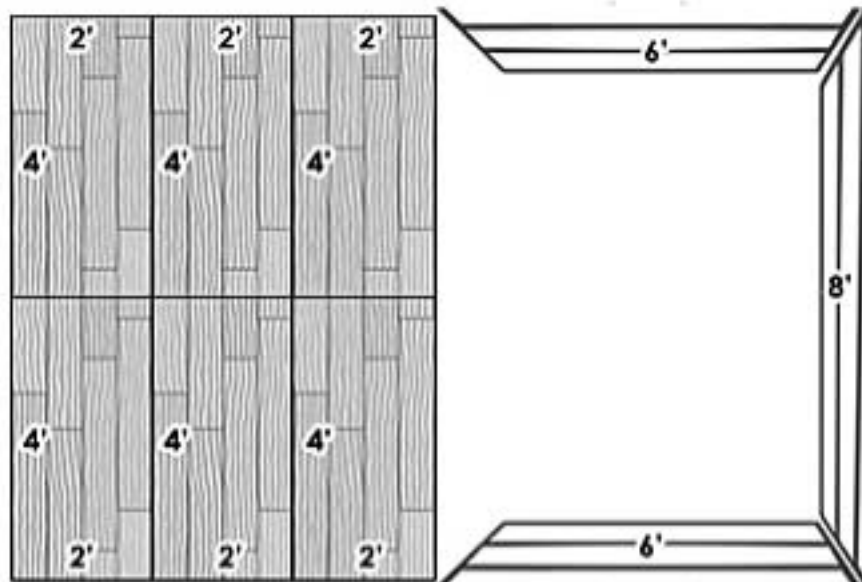


LINE RAISED FLOORING UP IN DESIRED LOCATION, THEN CONNECT THE FLOORING PANELS WITH THE INCLUDED CONNECTION CLIPS

PLACE DIGGING BARS FLAT ON GROUND, with FLAT SIDE DOWN, SIDE WITH PEGS FACING UPWARD

## STEP 2

LINE UP A SIDE PANEL AND AN END PANEL TO FORM YOUR FIRST CORNER, PLACING THE LEGS OF THE KENNEL PANEL INTO THE PEGS ON THE CORRESPONDING DIGGING-PREVENTION BARS—BE SURE YOUR PANEL WIRING IS FACING THE INTERIOR OF YOUR KENNEL.

**AS ILLUSTRATED BELOW:**

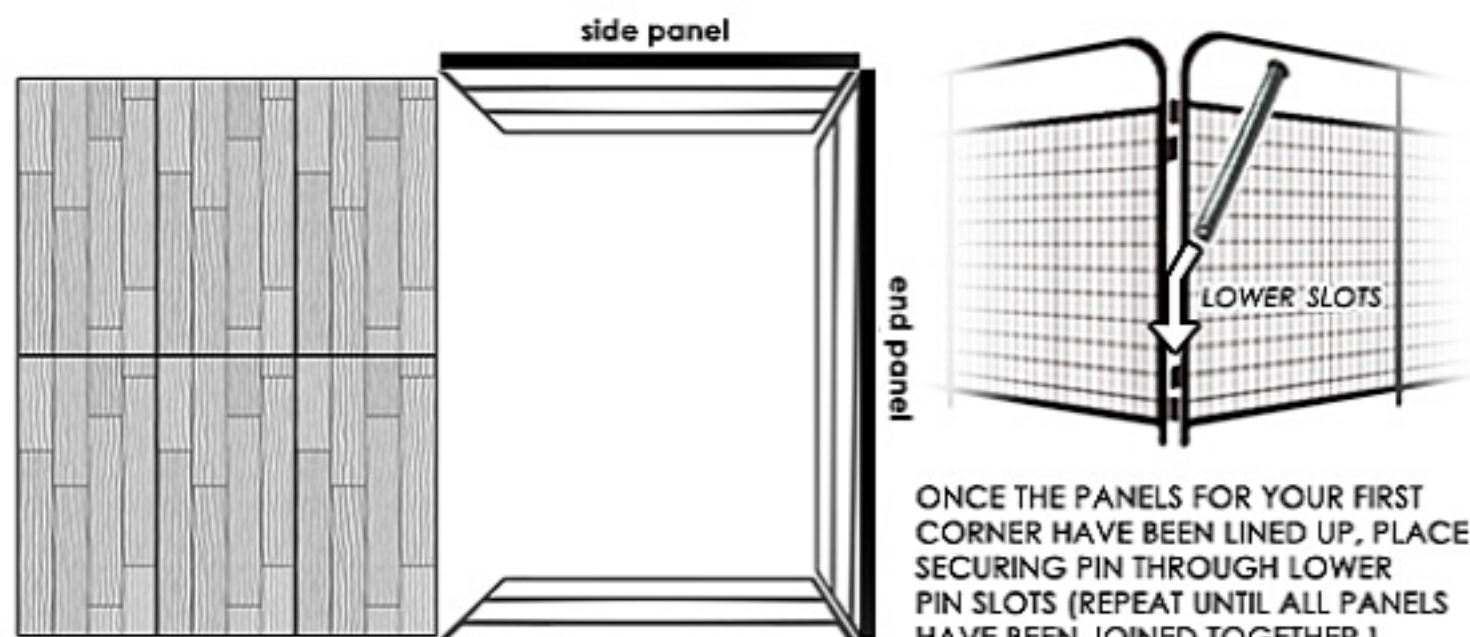

ONCE THE PANELS FOR YOUR FIRST CORNER HAVE BEEN LINED UP, PLACE SECURING PIN THROUGH LOWER PIN SLOTS (REPEAT UNTIL ALL PANELS HAVE BEEN JOINED TOGETHER.)  
**INSERT COTTER PINS FOR ADDED SECURITY**

## STEP 3

PLACE FOUR-HOLE BRACKETS INTO TOP PIN SLOT BETWEEN WHERE YOUR SIDE PANELS MEET ONE ANOTHER.

**AS ILLUSTRATED BELOW:**

